



 



 


 
 
 




 
 

 









 

 




Original	Sustituto
Power	Power
Sleep	Sleep
CBL/SAT	1
DVD	2
Blu-ray	3
Game	4
AUX	5
Media Player	6
iPod / USB	7
CD	8
Tuner	9
Network	Guide
TV Audio	0
Internet Radio	Pre Ch
Favorite Station 1	Shift + 1
Favorite Station 2	Shift + 2
Favorite Station 3	Shift + 3

Original	Sustituto
CH + / Page +	Ch +
CH - / Page -	Ch -
InstaPrevue	Media
Volume +	Vol +
Volume -	Vol -
Mute	Mute
Info	Info
Option	Options
Back	Back
Setup	Menu
Up	Up
Down	Down
Right	Right
Left	Left
Enter	Ok
I<< / Tune -	I<<
I<< / Tune -	I<<





Original	Sustituto
 Power	 Power
 Sleep	 Sleep
 CBL / SAT	 1
 DVD	 2
 Blu-ray	 3
 Game	 4
 AUX	 5
 Media Player	 6
 iPod / USB	 7
 CD	 8
 Tuner	 9
 Network	 Guide
 TV Audio	 0
 Internet Radio	 Pre Ch
 Favorite Station 1	 Shift + 1
 Favorite Station 2	 Shift + 2
 Favorite Station 3	 Shift + 3

Original	Sustituto
 CH+ / Page +	 Ch +
 CH - / Page -	 Ch -
 Volume +	 Vol +
 Volume -	 Vol -
 Mute	 Mute
 Back	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 I<< / Tune -	 I<<
 I<< / Tune -	 <<
 Play / Pause	 Play
 Play / Pause	 Pause
 >>I / Tune +	 >>I
 >>I / Tune +	 >>

