 











Original	Sustituto	Original	Sustituto
 Power	 Power	 -IPI-	 Shift + Format
 Source	 AV	 P+	 Ch +
 1	 1	 P-	 Ch -
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 OK/Select	 Ok
 7	 7	 DTV Menu	 D. Menu
 8	 8	 Call	 Pre Ch
 9	 9	 ATV Menu	 Menu
 0	 0	 Sleep	 Sleep
 Mute	 Mute	 Exit	 Exit
 Subtl	 Subt	 I/II	 Dual
 Vol+	 Vol +	 QV	 3D
 Vol-	 Vol -	 EPG	 Guide
 -ISI-	 Shift + Dual	 Page+	 >>

Original	Sustituto	Original	Sustituto
 MUTE	 MUTE	 SHIFT	 SHIFT
 TV	 DVD	 SAT	 AUX
 PLAY MODE	 REC MODE	 TV	 DUAL
 II	 ■	 AD	 OPT
 <<<	 >>>	 PICTURE	 3D
 LIST	 SUBT	 FORMAT	 AV
 SOUND	 REPEAT	 ZOOM	 D.MENU
 SLEEP	 TEXT	 AV	 INFO
 D.MENU	 MENU	 OK	 BACK
 MENU	 DISPLAY	 EXIT	 RETURN
 HOME	 SMART	 +	 +
 APP	 MEDIA	 -	 -
 1	 2	 3	 4
 4	 5	 6	 7
 7	 8	 9	 0
GUIDE	0	FAV	PRE-CH
A	B	C	D
Mandis SHOP			
www.mandis.tv			





	Original	Sustituto	Original	Sustituto
	Page-		<<	
	Info		Info	
	Text		Text	
	Mix		TV/R	
	[II]/Size		Format	
	Index		List	
	Hold		Media	
	Reveal		Options	
	Cancel		Back	
	Subpage		Eject	
	Red		Red	
	Green		Green	
	Yellow		Yellow	
	Blue		Blue	

