




 
 

 
 

 
 
 

 
 
 

 

 


 



 
 
 

 






Original	Sustituto
 Power	 Power
 I<<	 I<<
 <<	 <<
 >>	 >>
 >>I	 >>I
 Play	 Play
 Pause	 Pause
 Stop	 Stop
 Mute	 Mute
 Red / TV/R	 Red
 Red / TV/R	 TV/R
 Green / Subtitle	 Green
 Green / Subtitle	 Subt
 Yellow / TTX	 Yellow
 Yellow / TTX	 Text
 Blue / Info	 Blue
 Blue / Info	 Info

Original	Sustituto
 EPG	 Guide
 Back	 Back
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Menu	 Menu
 Exit	 Exit
 Vol+	 Vol +
 Vol-	 Vol -
 Rec	 Rec
 Fav	 Pre Ch
 Page+	 Ch +
 Page-	 Ch -
 1	 1
 2	 2



