












 









 




Original	Sustituto
 Power	 Power
 Info	 Info / Angle
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 MTS	 Display / Media
 C.C	 Smart / List
 Return	 Back / Return
 Vol+	 Vol+

Original	Sustituto
 Vol-	 Vol-
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Guide	 Guide / EPG / -/--
 Fav	 Fav / Marker / PC
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 Enter	 OK
 Right	 Right
 Down	 Down
 Input	 AV / Input / RDS
 Menu	 Menu / Home
 Picture	 Picture / Format
 Sound	 Sound / Title
 Sleep	 Sleep / Timer

