 















 





 





 












Original	Sustituto
 Power Receiver	 Power
 DVD	 2
 TV	 1
 VCR	 4
 CD-R	 3
 TUN	 6
 Test Tone	 Display / Media
 Input ATT	 TV/Radio /
 FL Dimmer	 Shift + Mute / Dimmer
 CH Select	 Smart / List
 CH Level-	 CH- / Page-
 CH Level+	 CH+ / Page+
 Effect-	 << / Tune-
 Effect+	 >> / Tune+
 Remote Setup	 Setup / OPT /
 Standard	 Subtitle / EQ
 Adv. Surr.	 Eject / Surround

Original	Sustituto
 Stereo	 Audio / Lang I/II
 Input Sel	 AV / Input / RDS
 Signal Select	 Sound / Title
 Midnight / Loudness	 Sleep / Timer
 Mute	 Mute / Dimmer
 Up/Tune+	 Up
 Up/Tune+	 Shift + >> /
 Left/ST-	 Left
 Left/ST-	 Shift + I<< / Preset-
 Enter	 OK
 Right/ST+	 Right
 Right/ST+	 Shift + >>I / Preset+
 Down/Tune-	 Down
 Down/Tune-	 Shift + << /
 Master	 Vol+
 Master Volume-	 Vol-
 TV Vol+	 Shift + Vol+





Original	Sustituto
Power DVD	Power
1 DVD	1
2 DVD	2
3 DVD	3
4 DVD	4
5 DVD	5
6 DVD	6
7 DVD	7
8 DVD	8
9 DVD	9
0 DVD	0
+10 DVD	Guide / EPG / -/--
Menu DVD	Menu / Home
Top Menu DVD	D.Menu / Top
Master	Vol+
Master volume-	Vol-
Mute	Mute / Dimmer

Original	Sustituto
Channel+ DVD	CH+ / Page+
Channel- DVD	CH- / Page-
Up DVD	Up
Down DVD	Down
Right DVD	Right
Left DVD	Left
Enter DVD	OK
Pause DVD	Pause / Step / Freeze
Rec DVD	Rec / Rec Mode
Play DVD	Play / Slow
<< DVD button"/> << DVD	<< / Tune-
>> DVD	>> / Tune+
>>I DVD	>>I / Preset+
Stop DVD	Stop / Hold
I<< DVD	I<< / Preset-
Audio DVD	Audio / Lang I/II
Sub Title DVD	Subtitle / EQ





Original	Sustituto
Angle DVD	Info / Angle
Power VCR	Shift + Power
1 VCR	Shift + 1
2 VCR	Shift + 2
3 VCR	Shift + 3
4 VCR	Shift + 4
5 VCR	Shift + 5
6 VCR	Shift + 6
7 VCR	Shift + 7
8 VCR	Shift + 8
9 VCR	Shift + 9
0 VCR	Shift + 0
Disc VCR	Shift + Back / Return
Channel+ VCR	Shift + CH+ /
Channel- VCR	Shift + CH- /
Up VCR	Shift + Up
Down VCR	Shift + Down

Original	Sustituto
Right VCR	Shift + Right
Left VCR	Shift + Left
Enter VCR	Shift + OK
Pause VCR	Shift + Pause / Step /
Play VCR	Shift + Play /
Stop VCR	Shift + Stop /
<< VCR	Shift + << /
>>I VCR	Shift + >>I / Preset+
>> VCR	Shift + >> /
I<< VCR	Shift + I<< / Preset-
Rec VCR	Shift + Rec / Rec Mode






 






 









 


































 







Original	Sustituto
Power CD	Power
1 CD	1
2 CD	2
3 CD	3
4 CD	4
5 CD	5
6 CD	6
7 CD	7
8 CD	8
9 CD	9
0 CD	0
+10 CD	Guide / EPG / -/--
Disc CD	Back / Return
Master	Vol+
Master Volume-	Vol-
Mute	Mute / Dimmer
Channel+ CD	CH+ / Page+

Original	Sustituto
Channel- CD	CH- / Page-
Up CD	Up
Down CD	Down
Right CD	Right
Left CD	Left
Enter CD	OK
Pause CD	Pause / Step / Freeze
Play CD	Play / Slow
<< CD	<< / Tune-
>> CD	>> / Tune+
>> CD	>> / Preset+
I<< CD	I<< / Preset-
Stop CD	Stop / Hold
Power TVC	Shift + Power
1 TVC	Shift + 1
2 TVC	Shift + 2
3 TVC	Shift + 3





Original	Sustituto	Original	Sustituto
 Power TUN	 Power	 Left TUN	 Left
 1 TUN	 1	 D.Access TUN	 Play / Slow
 2 TUN	 2	 Band TUN	 Smart / List
 3 TUN	 3	 T.Edit	 Pause / Step / Freeze
 4 TUN	 4	 Class TUN	 << / Tune-
 5 TUN	 5	 RF ATT TUN	 >> / Tune+
 6 TUN	 6	 MPX TUN	 Stop / Hold
 7 TUN	 7	 Display TUN	 Display / Media
 8 TUN	 8	 Power CDR	 Shift + Power
 9 TUN	 9	 1 CDR	 Shift + 1
 0 TUN	 0	 2 CDR	 Shift + 2
 Master	 Vol+	 3 CDR	 Shift + 3
 Master volume-	 Vol-	 4 CDR	 Shift + 4
 Mute	 Mute / Dimmer	 5 CDR	 Shift + 5
 Up TUN	 Up	 6 CDR	 Shift + 6
 Down TUN	 Down	 7 CDR	 Shift + 7
 Right TUN	 Right	 8 CDR	 Shift + 8





Original	Sustituto
9 CDR	+ Shift + 9
0 CDR	+ Shift + 0
+10 CDR	+ Shift + Guide / EPG / -/-
Channel+ CDR	+ Shift + CH+ /
Channel- CDR	+ Shift + CH- /
Up CDR	+ Shift + Up
Down CDR	+ Shift + Down
Right CDR	+ Shift + Right
Left CDR	+ Shift + Left
Enter CDR	+ Shift + OK
Pause CDR	+ Shift + Pause / Step /
Play CDR	+ Shift + Play /
Stop CDR	+ Shift + Stop /
<< CDR button"/> << CDR	+ Shift + << /
Rec CDR	+ Shift + Rec / Rec Mode
I<< CDR	+ Shift + I<< / Preset-
>> CDR	+ Shift + >> /

Tune+

Original	Sustituto
>>I CDR	+ Shift + >>I / Preset+

