

















 



 





 









Original	Sustituto
 Power	 Power
 Timer/Play	 Info / Angle
 Clock/Timer	 Shift + Sleep / Timer
 Dimmer	 Shift + Mute / Dimmer
 Sleep	 Sleep / Timer
 Auto Off	 Shift + Power
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Sustituto
 9	 9
 0	 0
 Program	 TV/Radio /
 +10	 Guide / EPG / -/-
 Del	 Exit / Cancel / Clear
 Repeat	 Green / APP / Repeat
 AUX	 Shift + 7
 Play Mode	 Shift + Play /
 DAB/FM	 Red / Netflix / Search
 << / Tune-	 << / Tune-
 >> / Tune+	 >> / Tune+
 Stop	 Stop / Hold
 Play/Pause CD	 Play / Slow
 Display	 Display / Media
 Play/Pause iPod	 Pause / Step / Freeze
 Re-Master	 Picture / Format
 Surround	 Eject / Surround





Original		Sustituto	
	D.Bass		Audio / Lang I/II
	Up		Up
	Down		Down
	iPod Menu		Menu / Home
	Right		Right
	Preset EQ		Subtitle / EQ
	Bass/Treble		Sound / Title
	Left		Left
	OK		OK
	DAB Menu		D.Menu / Top
	Auto Preset		Smart / List
	Tune Mode		Blue / Prime Video / Random
	DAB Secondary		Yellow / YouTube / Repeat

Original		Sustituto	

