



Original	Sustituto
Power	Power
Open/Close	Eject / Surround
V.Mode	Picture / Format
OSD	Display / Media
P/N	AV / Input / RDS
Program	TV/Radio /
Menu	Menu / Home
Title	Sound / Title
Subtitle	Subtitle / EQ
Angle	Info / Angle
Goto	Red / Netflix / Search
Setup	Setup / OPT /
1	1
2	2
3	3
4	4
5	5

Original	Sustituto
6	6
7	7
8	8
9	9
0	0
10+	Guide / EPG / -/-
Up	Up
Down	Down
Right	Right
Left	Left
Enter	OK
PBC	Text / Goto
Return	Back / Return
Zoom	Zoom / Size
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold



