


 

 
 
 




 














 




Original	Sustituto
 Power	 Power
 ATV	 Display / Media
 DTV	 D.Menu / Top
 HDMI	 Shift + 0
 Sleep	 Sleep / Timer
 Input	 AV / Input / RDS
 Sound	 Sound / Title
 Picture	 Picture / Format
 Zoom	 Zoom / Size
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Sustituto
 9	 9
 0	 0
 Recall	 Back / Return
 Info	 Info / Angle
 Freeze	 Pause / Step / Freeze
 Subtitle	 Subtitle / EQ
 Nicam	 Audio / Lang I/II
 Vol +	 Vol+
 Vol -	 Vol-
 Mute	 Mute / Dimmer
 Prog +	 CH+ / Page+
 Prog -	 CH- / Page-
 Navegacion Subir	 Up
 Navegacion Bajar	 Down
 Navegacion	 Right
 Navegacion	 Left
 OK	 OK



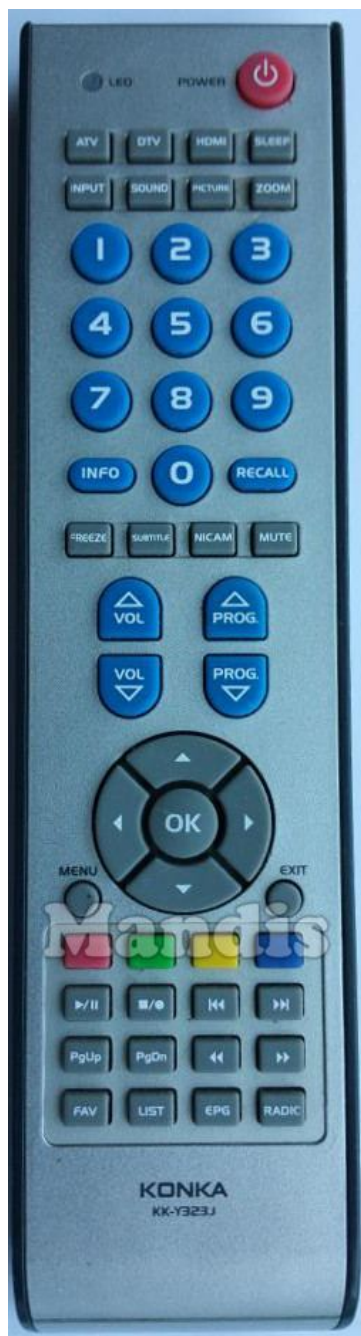

Original	Sustituto
	Menu / Home
	Exit / Cancel / Clear
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Play / Slow
	Stop / Hold
	I<< / Preset-
	>>I / Preset+
	Shift + CH+ /
	Shift + CH- /
	<< / Tune-
	>> / Tune+
	Fav / Marker / PC
	Smart / List
	Guide / EPG / -/--

Original	Sustituto
	TV/Radio /

