



Original	Sustituto
Power	Power
CD	3
Tuner	6
Tape	5
AUX	7
Display Eject	Guide / EPG / -/--
Power Sound	TV/Radio /
I<<	Green / APP / Repeat
>>I	>>I / Preset+
<I	Eject / Surround
I>/Pause	Yellow / YouTube / Repeat
PTY/Stop	Stop / Hold
CD Copy	Fav / Marker / PC
Rec	Rec / Rec Mode
Memory	Menu / Home
+	Up
-	Down

Original	Sustituto
i	Info / Angle
Cancel	Exit / Cancel / Clear
Sound Ctrl	Sound / Title
Up	CH+ / Page+
Down	CH- / Page-
Mute	Mute / Dimmer
Bass	Display / Media
Mode	Picture / Format
Treble	Text / Goto

