


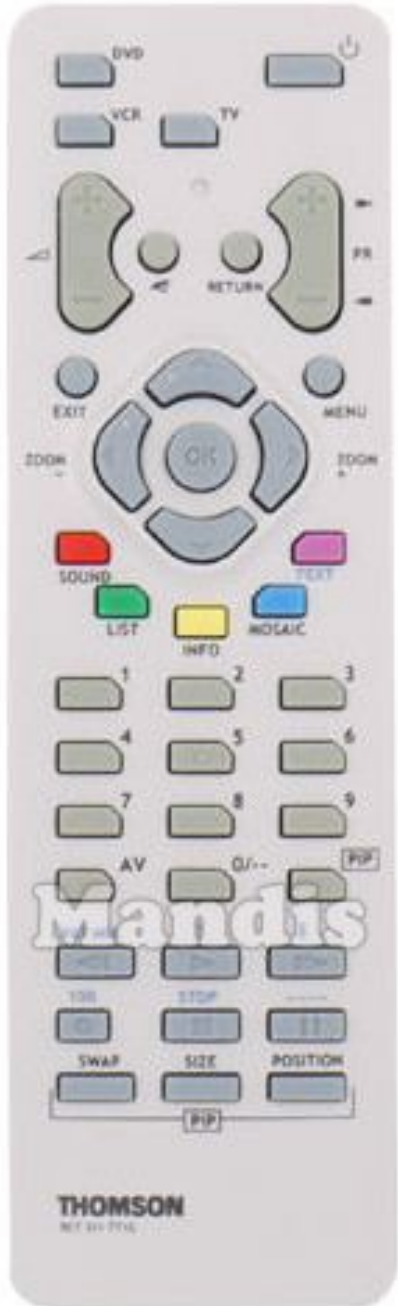









 

 

 







 



Original	Sustituto
	Power
	Vol+
	Vol-
	Mute / Dimmer
	Back / Return
	CH+ / Page+
	>> / Preset+
	<< / Preset-
	CH- / Page-
	Exit / Cancel / Clear
	Menu / Home
	Up
	Down
	Right
	Left
	OK
	Red / Netflix / Search


Original	Sustituto
	Sound / Title
	Green / APP / Repeat
	Shift + Smart / List
	Yellow / YouTube / Repeat
	Info / Angle
	Smart / List
	Blue / Prime Video / Random
	Display / Media
	Text / Goto
	1
	2
	3
	4
	5
	6
	7
	8


 







Original	Sustituto	Original	Sustituto
	 9		
	 0		
	 AV / Input / RDS		
	 Zoom / Size		
	 << / Tune-		
	 Play / Slow		
	 >> / Tune+		
	 Rec / Rec Mode		
	 Stop / Hold		
	 Pause / Step / Freeze		
	 Setup / OPT /		
	 Picture / Format		
	 TV/Radio /		

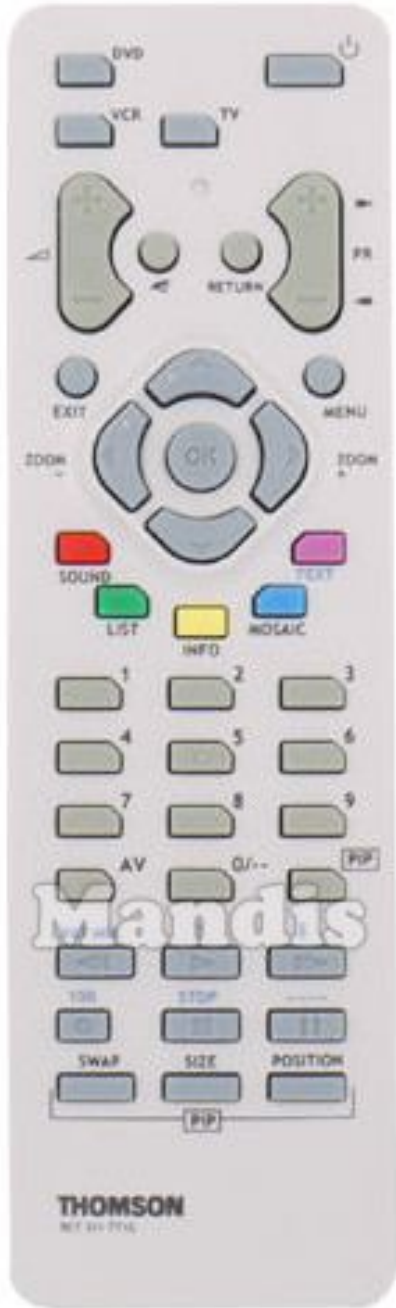




Original	Sustituto
	 Power
	 Vol+
	 Vol-
	 Mute / Dimmer
	 Back / Return
	 CH+ / Page+
	 >> / Preset+
	 CH- / Page-
	 << / Preset-
	 Exit / Cancel / Clear
	 Menu / Home
	 Up
	 Down
	 Right
	 Left
	 OK
	 Red / Netflix / Search

Original	Sustituto
	 Sound / Title
	 Green / APP / Repeat
	 Shift + Smart / List
	 Info / Angle
	 Yellow / YouTube / Repeat
	 Smart / List
	 Blue / Prime Video / Random
	 Display / Media
	 Text / Goto
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8




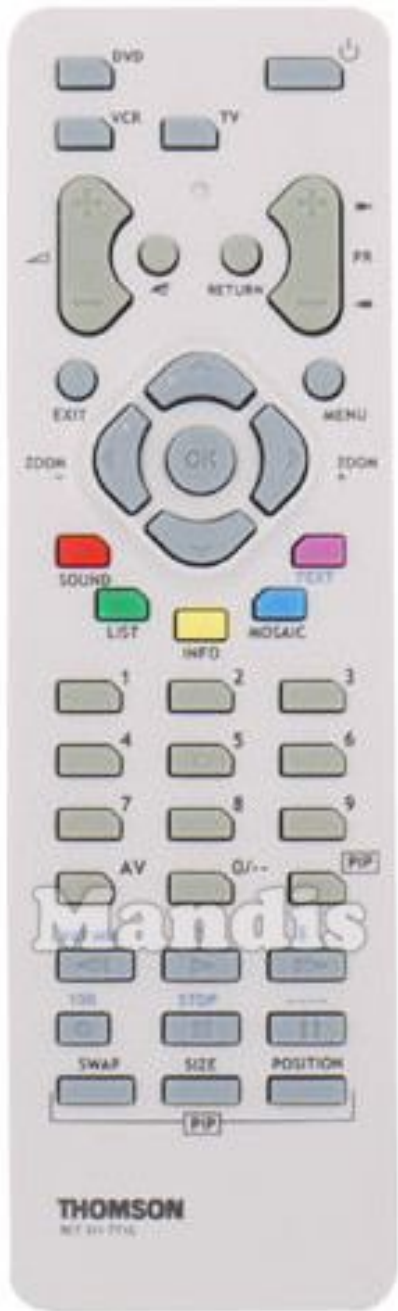

Original	Sustituto
9	9
0 / - / -	0
AV	AV / Input / RDS
PIP	Zoom / Size
<< / Pat-Mix	<< / Tune-
Play / ?	Play / Slow
>>	>> / Tune+
Rec/100	Rec / Rec Mode
Stop	Stop / Hold
Pause / ----	Pause / Step / Freeze
Swap PIP	Setup / OPT /
Size PIP	Picture / Format
Position PIP	TV/Radio /

Original	Sustituto




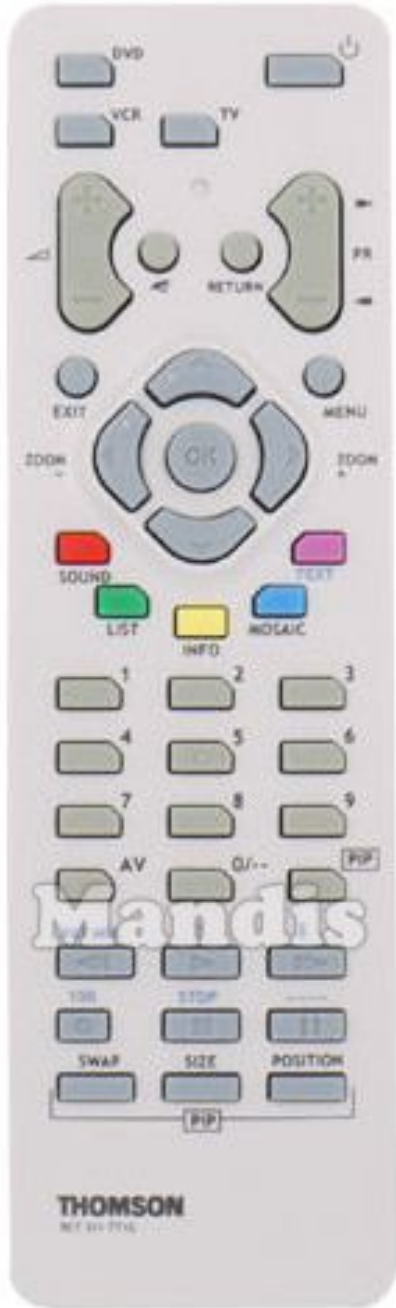

Original	Sustituto
Power	Power
Vol+	Vol+
Vol-	Vol-
Mute	Mute / Dimmer
Return	Back / Return
PR+	CH+ / Page+
>>	>> / Preset+
<<	<< / Preset-
PR-	CH- / Page-
Exit	Exit / Cancel / Clear
Menu	Menu / Home
Up	Up
Down	Down
Right/Zoom+	Right
Left/Zoom-	Left
OK	OK
Red	Red / Netflix / Search

Original	Sustituto
Sound	Sound / Title
List	Shift + Smart / List
Green	Green / APP / Repeat
Info	Info / Angle
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Mosaic	Smart / List
Violet	Display / Media
Text	Text / Goto
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8



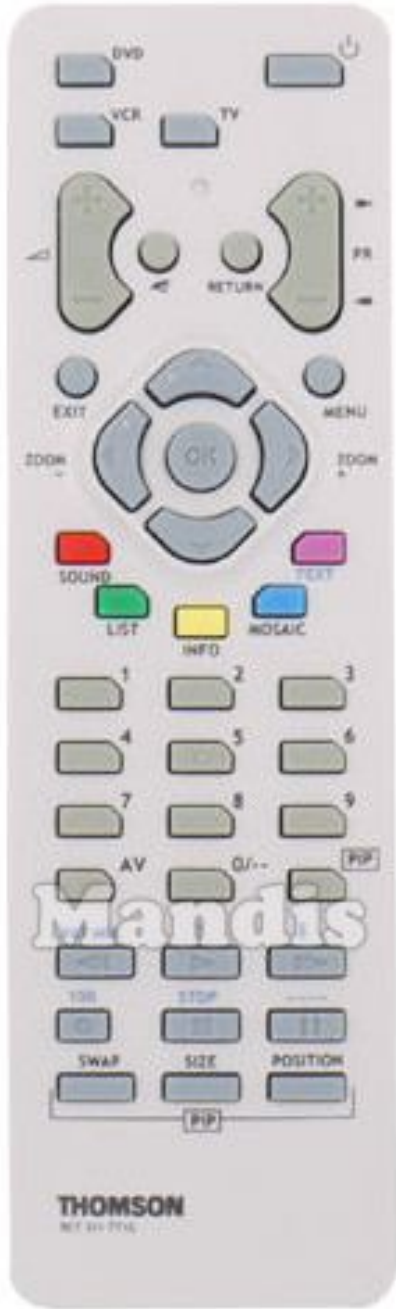

Original	Sustituto
9	9
0/-/--	0
AV	AV / Input / RDS
PIP	Zoom / Size
<</Pat-Mix	<< / Tune-
Play/?	Play / Slow
>>	>> / Tune+
Rec/100	Rec / Rec Mode
Stop	Stop / Hold
Pause/----	Pause / Step / Freeze
Size PIP	Picture / Format
Position PIP	TV/Radio /

Original	Sustituto

