

















 





 













Original	Sustituto
	 Power
	 Info / Angle
	 Sleep / Timer
	 AV / Input / RDS
	 Up
	 Down
	 Right
	 Left
	 OK
	 Back / Return
	 Menu / Home
	 Setup / OPT /
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 Stop / Hold
	 Pause / Step / Freeze

Original	Sustituto
	 Rec / Rec Mode
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Shift + Red / Netflix /
	 Display / Media
	 Smart / List
	 Vol+
	 Mute / Dimmer
	 Vol-
	 CH+ / Page+
	 Exit / Cancel / Clear
	 CH- / Page-
	 1
	 2
	 3



