



Original	Sustituto
	 Power
	 TV/Radio /
	 Zoom / Size
	 Eject / Surround
	 Audio / Lang I/II
	 Subtitle / EQ
	 Info / Angle
	 Setup / OPT /
	 Menu / Home
	 D.Menu / Top
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Display / Media
	 Back / Return
	 I<< / Preset-
	 >>I / Preset+
	 Up

Original	Sustituto
	 Down
	 Right
	 Left
	 OK
	 Stop / Hold
	 Play / Slow
	 Pause / Step / Freeze
	 CH- / Page-
	 CH+ / Page+
	 << / Tune-
	 >> / Tune+
	 1
	 2
	 3
	 4
	 5
	 6





Original	Sustituto
7	AUX - HDD 7
8	USB 8
9	BLUETOOTH 9
0	HDMI - SAT 0
+10	GUIDE EPG Guide / EPG / -/--
CLEAR	CLEAR EXIT CANCEL Exit / Cancel / Clear
RANDOM	Prime Video RANDOM Blue / Prime Video / Random
PROGRAM	SHIFT + PROGRAM TV/RADIO Shift + TV/Radio / Program
SEARCH MODE	NETFLIX SEARCH Red / Netflix / Search

Original	Sustituto

