
 
 

 


 

 






























 



 





Original	Sustituto	Original	Sustituto
	Power		Red / Netflix / Search
	1		Green / APP / Repeat
	2		Yellow / YouTube / Repeat
	3		Blue / Prime Video / Random
	4		Guide / EPG / -/-
	5		Smart / List
	6		AV / Input / RDS
	7		Menu / Home
	8		Display / Media
	9		Up
	0		Down
	Info / Angle		Right
	Text / Goto		Left
	Shift + Yellow / YouTube /		OK
	Shift + Red / Netflix /		Back / Return
	Shift + Green / APP /		TV/Radio /
	Shift + Blue / Prime Video / Random		Shift + Menu / Home





Original	Sustituto	Original	Sustituto
	Vol+		Vol+
	Vol-		Vol-
	Mute		Mute / Dimmer
	Recall		Fav / Marker / PC
	CH+		CH+ / Page+
	CH-		CH- / Page-
	Audio		Audio / Lang I/II
	[...]		Subtitle / EQ
	Help		Zoom / Size
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Pause		Pause / Step / Freeze
	Exit		Exit / Cancel / Clear

