 


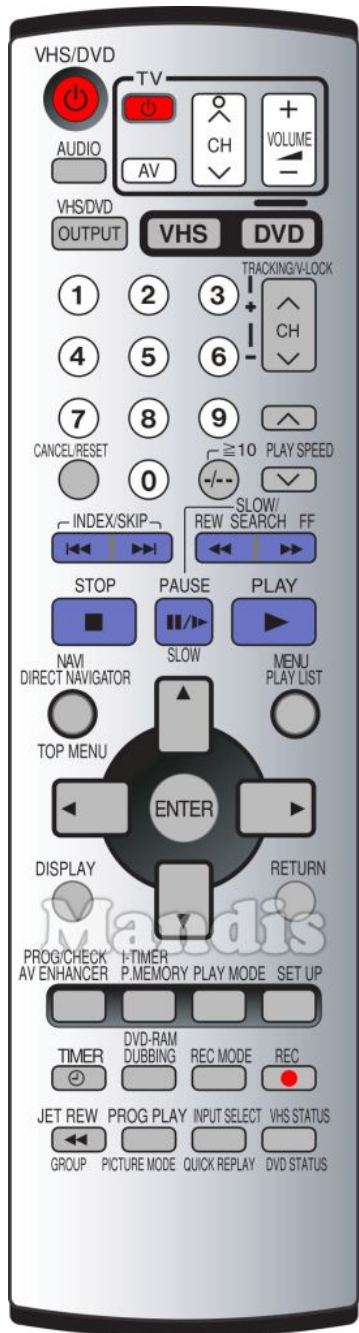

Original	Sustituto
Picture Mode	Picture / Format
DVD Status	Info / Angle
Dubbing	Yellow / YouTube / Repeat
VHS/DVD	Smart / List
Quick Replay	Red / Netflix / Search
Group	Zoom / Size
P.Memory	Fav / Marker / PC
Return	Back / Return
AV Enhancer	AV / Input / RDS
Direct Navigator / Top Menu	D.Menu / Top
Play List / Menu	Menu / Home
Play Mode	Shift + Play / Slow
REW / << Slow/Search	<< / Tune-
FF / Slow/Search	>> / Tune+
VHS/DVD Power	Power
Pause / Slow	Pause / Step / Freeze
CH- / Tracking/V-Lock-	CH- / Page-


Original	Sustituto
CH+ / Tracking/V-Lock+	CH+ / Page+
Cancel / Reset	Exit / Cancel / Clear
-/-- / >=10	Guide / EPG / -/--
Play	Play / Slow
Up	Up
Left	Left
Enter	OK
Right	Right
Down	Down
Display	Display / Media
Setup	Setup / OPT /
Timer	Sleep / Timer
0	0
Audio	Audio / Lang I/II
1	1
2	2
3	3





	Original	Sustituto	Original	Sustituto
	4	 4		
	5	 5		
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	I<< Skip	 I<< / Preset-		
	Skip >>I	 >>I / Preset+		
	Stop	 Stop / Hold		




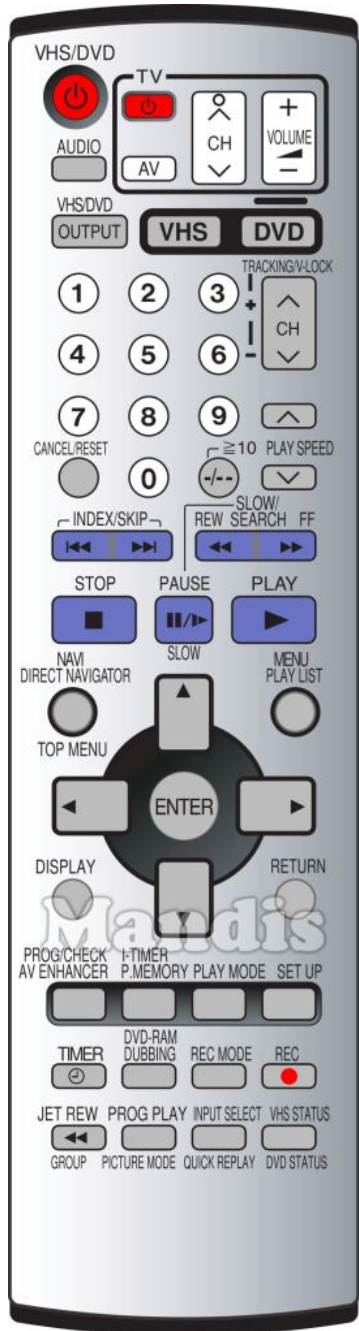

Original	Sustituto
Prog Play	Shift + Play /
I-Timer	Shift + Sleep / Timer
Cancel / Reset	Exit / Cancel / Clear
VHS/DVD	Smart / List
Display	Display / Media
VCR Status	Info / Angle
Dubbing	Yellow / YouTube / Repeat
Jet Rew	Shift + << /
Pause / Slow	Pause / Step / Freeze
CH+ / Tracking/V-Lock+	CH+ / Page+
CH- / Tracking/V-Lock-	CH- / Page-
VHS/DVD Power	Power
-/-- / >=10	Guide / EPG / -/--
Return	Back / Return
Prog/Check	TV/Radio /
I<< Index	I<< / Preset-
Index >>I	>>I / Preset+


Original	Sustituto
FF	>> / Tune+
Play	Play / Slow
Menu	Menu / Home
Up	Up
Left	Left
Enter	OK
Right	Right
Down	Down
Stop	Stop / Hold
Rec Mode	Shift + Rec / Rec Mode
Timer	Sleep / Timer
Rec	Rec / Rec Mode
0	0
Audio	Audio / Lang I/II
1	1
2	2
3	3



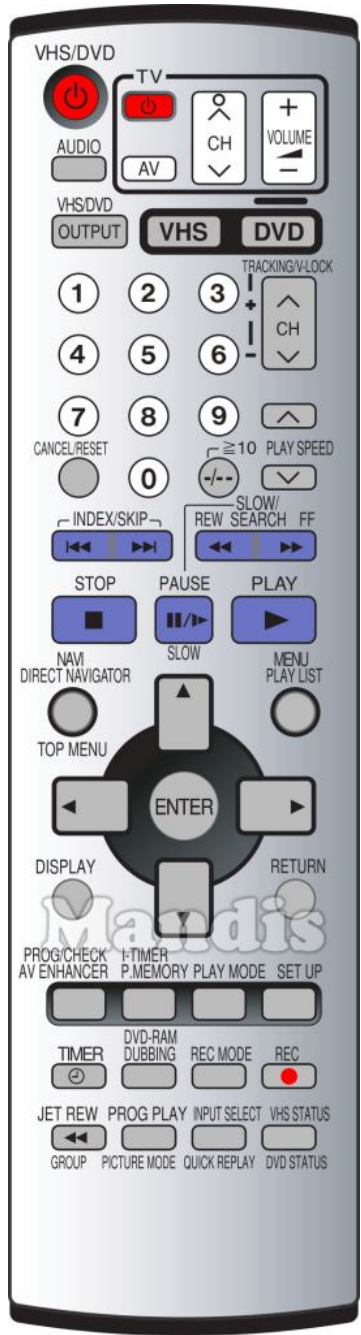 





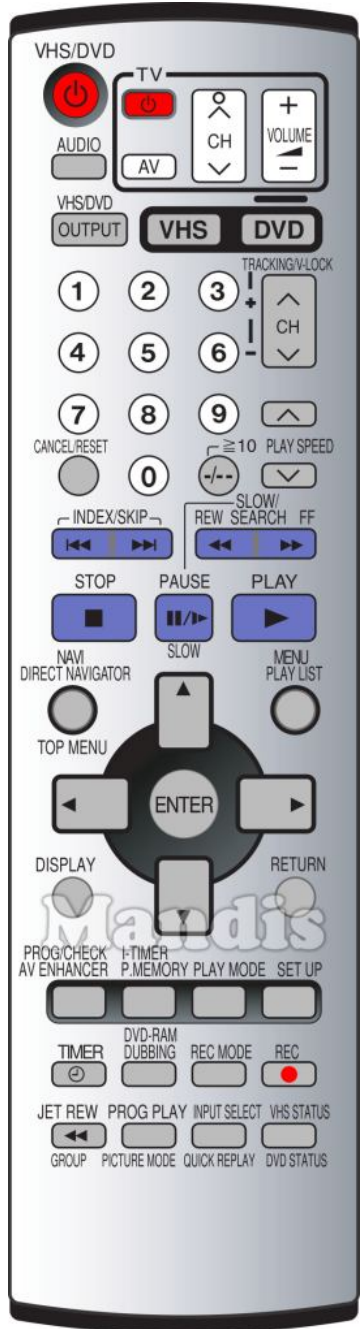 

	Original	Sustituto	Original	Sustituto
4	4	4		
5	5	5		
6	6	6		
7	7	7		
8	8	8		
9	9	9		
Y INPUT SELECT QUICK REPLAY	Input Select	AV / Input / RDS		
REW SEAF	REW	<< / Tune-		





Original	Sustituto	Original	Sustituto
Power	 Power		
AV	 AV / Input / RDS		
Volume+	 Vol+		
Volume-	 Vol-		
CH+	 CH+ / Page+		
CH-	 CH- / Page-		

