



















 

















Original	Sustituto
	 Power
	 AV / Input / RDS
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Text / Goto
	 Back / Return
	 Mute / Dimmer
	 Shift + Smart / List
	 Vol+

Original	Sustituto
	 Vol-
	 CH+ / Page+
	 CH- / Page-
	 Menu / Home
	 Smart / List
	 Guide / EPG / -/--
	 Setup / OPT /
	 Info / Angle
	 Shift + Back / Return
	 Exit / Cancel / Clear
	 Up
	 Down
	 Left
	 Right
	 OK
	 Red / Netflix / Search
	 Green / APP / Repeat





Original	Sustituto
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 E-Manual / TV/Radio /
	 3D / Zoom / Size
	 AD/Subt. / Subtitle / EQ
	 Stop / Stop / Hold
	 <</<< / << / Tune-
	 Play / Play / Slow
	 Pause / Pause / Step / Freeze
	 >>/>> / >> / Tune+

Original	Sustituto

