




 

 

















 

 





Original	Sustituto
 Power	 Power
 Sleep	 Sleep / Timer
 PlayTimer	 Pause / Step / Freeze
 Clock/Timer	 Shift + Sleep / Timer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 DEL	 Exit / Cancel / Clear
 +10	 Guide / EPG / -/--
 Program	 TV/Radio /

Original	Sustituto
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Bluetooth	 Shift + 9
 CD/USB	 Red / Netflix / Search
 Radio/Ext-In	 Green / APP / Repeat
 I<<	 I<< / Preset-
 Play/Pause	 Play / Slow
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 >>	 >> / Tune+
 OK	 OK
 D.Bass	 Text / Goto
 Sound	 Sound / Title
 Preset EQ	 AV / Input / RDS
 Display	 Display / Media



Program

