


























 




 


















Original	Sustituto	Original	Sustituto
Pbc	 Picture / Format	DVD/TV	 AV / Input / RDS
C/CH	 Exit / Cancel / Clear	Menu	 Menu / Home
Auto/Track	 Fav / Marker / PC	Menu Up	 Up
Np	 Text / Goto	Menu Left	 Left
Video	 Smart / List	Display	 Display / Media
Prev.	 I<< / Preset-	9	 9
Rep/A-B	 Yellow / YouTube / Repeat	+10	 Guide / EPG / -/--
Angle	 Info / Angle	0	 0
Title	 Sound / Title	Record	 Rec / Rec Mode
Subt.	 Subtitle / EQ	Timer	 Sleep / Timer
Slow Down	 CH- / Page-	Setup	 Setup / OPT /
Slow Up	 CH+ / Page+	Audio	 Audio / Lang I/II
Stop	 Stop / Hold	3D	 Shift + 3
Pause	 Pause / Step / Freeze	Menu Right	 Right
Zoom	 Zoom / Size	OK Enter	 OK
Audio Off	 Mute / Dimmer	8	 8
Repeat/1/All	 Green / APP / Repeat	Karaoke/Step	 Shift + Pause / Step / Freeze



Original	Sustituto	Original	Sustituto
7	 7	2	 2
Return	 Back / Return	1	 1
Menu Down	 Down		
Open/Close	 Eject / Surround		
6	 6		
Progr.	 TV/Radio /		
Volume+	 Vol+		
F.Forward	 >> / Tune+		
5	 5		
Next	 >> / Preset+		
Volume-	 Vol-		
Play	 Play / Slow		
4	 4		
Top Menu	 D.Menu / Top		
On/Off	 Power		
Rewind	 << / Tune-		
3	 3		

