


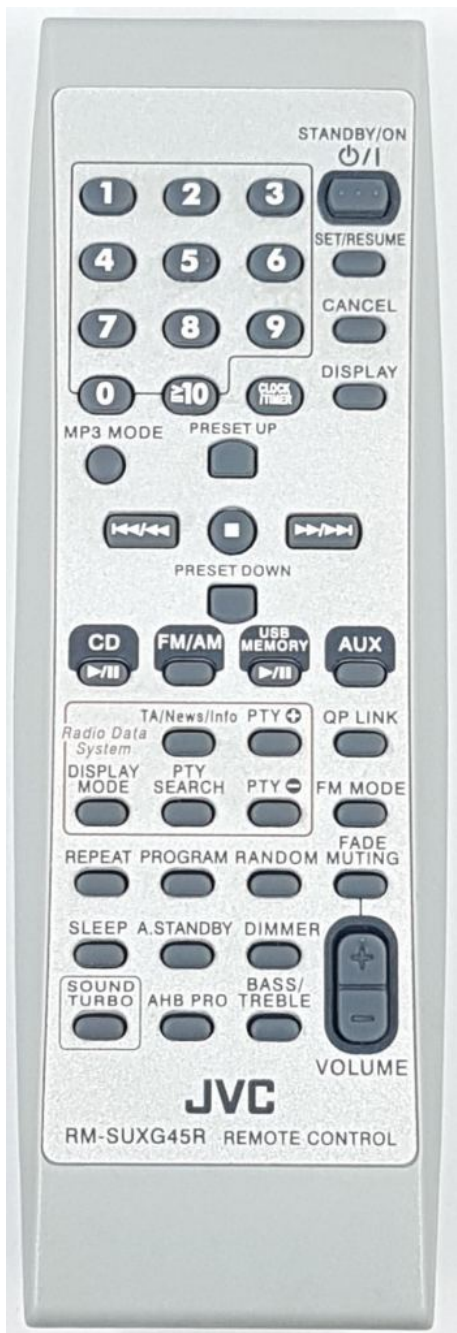

Original	Sustituto
Standby/On	Power
1 1	1 1
2 2	2 2
3 3	3 3
4 4	4 4
5 5	5 5
6 6	6 6
7 7	7 7
8 8	8 8
9 9	9 9
0 0	0 0
>10 >10	GUIDE EPG Guide / EPG / -/--
Clock/Timer	SHIFT + TIMER SLEEP Shift + Sleep / Timer
Set/Resume	HOME MENU Menu / Home
Cancel	CLEAR EXIT Exit / Cancel / Clear
Display	MEDIA DISPLAY Display / Media
MP3 Mode	FORMAT PICTURE Picture / Format

Original	Sustituto
Preset Up	PRESET+ >> / Preset+
Preset Down	PRESET- << / Preset-
>>/>>	TUNE+ >> / Tune+
<</<<	TUNE- << / Tune-
Stop	HOLD Stop / Hold
Play/Pause CD	SLOW Play / Slow
FM/AM	PC FAV MARKER Fav / Marker / PC
Play/Pause USB Memory	STEP-FREEZE Pause / Step / Freeze
AUX	RDS AV INPUT AV / Input / RDS
TA/News/Info	ANGLE INFO Info / Angle
Display Mode	OPT-TOOLS SETUP Setup / OPT /
PTY Search	NETFLIX SEARCH Red / Netflix / Search
PTY+	CH PAGE CH+ / Page+
PTY-	CH PAGE CH- / Page-
QP Link	LIST SMART Smart / List
FM Mode	PROGRAM TV/RADIO TV/Radio /
Repeat	APP REPEAT Green / APP / Repeat





Original	Sustituto
PROGRAM	Shift + TV/Radio / Program
RANDOM	Blue / Prime Video / Random
SLEEP	Sleep / Timer
A.STANDBY	D.Menu / Top
DIMMER	Shift + Mute / Dimmer
SOUND TURBO	Sound / Title
AHB PRO	Subtitle / EQ
BASS/TREBLE	Audio / Lang I/II
Vol+	Vol+
Vol-	Vol-
FADE MUTING	Mute / Dimmer

Original	Sustituto

