



Original	Sustituto
Power Audio	Power
Tv Direct	Shift + 0
Power DVR/DVD	Red / Netflix / Search
Power VCR	Green / APP / Repeat
Power STB	Yellow / YouTube / Repeat
Power Tv	Blue / Prime Video / Random
DVR/DVD	Fav / Marker / PC
VCR	Shift + 4
Video	Shift + 5
TV	Shift + 1
DVD Multi	Guide / EPG / -/--
FM/AM	Shift + 6
Tv/Video	TV/Radio /
Muting	Mute / Dimmer
Vol+	Vol+
Vol-	Vol-
Channel+	Shift + Audio / Lang I/II

Original	Sustituto
Channel-	Shift + Setup / OPT / Tools
Tv Vol+	Shift + Vol+
Tv Vol-	Shift + Vol-
I<</Tuning-	I<< / Preset-
Play/FM Mode	Play / Slow
>>I/Tuning+	>>I / Preset+
<<	<< / Tune-
Stop/Memory	Stop / Hold
Pause	Pause / Step / Freeze
>>	>> / Tune+
Menu	Menu / Home
Top Menu/STB	D.Menu / Top
Smart Surround Setup	Sound / Title
On	Picture / Format
Up/TA/News/Inf	Up
Down/PTY	Down
Right/PTY+	Right
















Original	Sustituto
Left/PTY-	Left
Enter	OK
fsIRate/Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
SetUp	Setup / OPT /
DVD/HDD/Title/Gr	Shift + 2
Zoom/→	Zoom / Size
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0

Original	Sustituto
←	Back / Return
VFP/Progressive	Smart / List
Angle	Info / Angle
Ex/Es/Return	Shift + Back / Return
Cancel	Exit / Cancel / Clear
DVD Card/Rec	Rec / Rec Mode
Rec Pause	Shift + Pause / Step /
Surround	Eject / Surround
Display/Dimmer	Display / Media
Input Analog/Digital	AV / Input / RDS
L-Front+/Thumbn	Shift + Up
L-Front-	Shift + Down
Front-R+/Slide	Shift + Right
Front-R-	Shift + Left
Center+/3D/S	CH+ / Page+
Center-	CH- / Page-
Page+/Subwfr+	Shift + CH+ / Page+

Page+



 

 




	Original	Sustituto	Original	Sustituto
	Page-/Subwfr-	 Shift + CH- /		
	Test Tone	 Text / Goto		
	Sleep	 Sleep / Timer		
	L-Surr+	 Shift + Smart / List		
	L-Surr-	 Shift + Display / Media		
	Surr-R+	 Shift + TV/Radio / Program		
	Surr-R-	 Shift + AV / Input / RDS		
	S.Back+	 Shift + Picture / Format		
	S.Back-	 Shift + D.Menu / Top Menu		











 





















 
 


Original	Sustituto
 Power DVD	 Power
 Power Audio	 Shift + Power
 Muting	 Mute / Dimmer
 Vol+	 Vol+
 Vol-	 Vol-
 I<<	 I<< / Preset-
 Play	 Play / Slow
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Menu	 Menu / Home
 Top Menu/STB	 D.Menu / Top
 On Screen	 Picture / Format
 Up	 Up
 Down	 Down

Original	Sustituto
 Right	 Right
 Left	 Left
 Enter	 OK
 fs/Rate/Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Set Up	 Setup / OPT /
 DVD/HDD/Title/Gr	 Blue / Prime Video / Random
 Zoom/→	 Zoom / Size
 ←	 Back / Return
 VFP/Progressive	 Smart / List
 Angle	 Info / Angle
 EX/Es/Return	 Shift + Back / Return
 Cancel	 Exit / Cancel / Clear
 DVD Card/Rec	 Rec / Rec Mode
 1	 1
 2	 2
 3	 3





Original		Sustituto		Original	Sustituto
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0		0		
	10		Guide / EPG / -/--		
	+10		Fav / Marker / PC		
	Surround		Eject / Surround		
	Display/Dimmer		Display / Media		
	Input Analog/Digital		AV / Input / RDS		
	Thumbnail		Yellow / YouTube / Repeat		
	Slide		Text / Goto		
	3D/S Effect		Sound / Title		
	Page+		CH+ / Page+		





Original	Sustituto
Power Audio	Power
FM/AM	TV/Radio /
Muting	Mute / Dimmer
Vol+	Vol+
Vol-	Vol-
I<</Tuning-	I<< / Preset-
Play/FM Mode	Play / Slow
>>I/Tuning+	>>I / Preset+
Stop/Memory	Stop / Hold
Up/TA7News/Inf	Up
Down/PTY	Down
Right/PTY+	Right
Left/PTY-	Left
On	Picture / Format
Smart Surround Setup	Smart / List
1 FM/AM	1
2 FM/AM	2

Original	Sustituto
3 FM/AM	3
4 FM/AM	4
5 FM/AM	5
6 FM/AM	6
7 FM/AM	7
8 FM/AM	8
9 FM/AM	9
10 FM/AM	0
+10 FM/AM	Fav / Marker / PC
EX/ES/Return	Back / Return
Display/Dimmer	Display / Media
Decode	Shift + 2
EQ Freq	Shift + 3
Bass Boost	Shift + 4
C.Tone	Shift + 5
EQ Level+	Shift + 6
Midnight	Shift + 7





Original	Sustituto	Original	Sustituto
	Effect	+ (USB)	Shift + 8
	EQ Level-	+ (BLUETOOTH)	Shift + 9
	A.Position	+ (HDMI - SAT)	Shift + 0

