




Original	Sustituto
	 Power
	 Mute / Dimmer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 TV/Radio /
	 Display / Media
	 Menu / Home
	 Guide / EPG / -/-
	 Info / Angle

Original	Sustituto
	 Exit / Cancel / Clear
	 Up
	 CH+ / Page+
	 Down
	 CH- / Page-
	 OK
	 Right
	 Vol+
	 Left
	 Vol-
	 Smart / List
	 Pause / Step / Freeze
	 Picture / Format
	 Shift + CH+ /
	 Shift + CH- /
	 >> / Preset+
	 I<< / Preset-





Original

Sustituto

	UHF		AV / Input / RDS
	Red / Recall		Red / Netflix / Search
	Red / Recall		Back / Return
	Green / Audio		Green / APP / Repeat
	Green / Audio		Audio / Lang I/II
	Yellow / Text		Yellow / YouTube / Repeat
	Yellow / Text		Text / Goto
	Blue		Blue / Prime Video / Random

Original

Sustituto

