



Original	Sustituto
Power	Power
Open/Close	Eject / Surround
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Clear	Exit / Cancel / Clear
<<<	<<< / Tune-
>>>	>>> / Tune+
<<<	<<< / Preset-
>>>	>>> / Preset+

Original	Sustituto
Play	Play / Slow
Pause/Step	Pause / Step / Freeze
Stop	Stop / Hold
DVD Menu	D.Menu / Top
Title	Sound / Title
Up	Up
Enter	OK
Down	Down
Right	Right
Left	Left
Return	Back / Return
Display	Display / Media
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Angle	Info / Angle
Setup	Setup / OPT /
Marker	Fav / Marker / PC



