









 

 



 







 





 













 













 











 

 










 
 
 





 



 










Original		Sustituto		Original		Sustituto	
	Power		Power		0		0
	Mute		Mute / Dimmer		10+		Guide / EPG / -/-
	Open/Close		Eject / Surround		Goto		Text / Goto
	USB		Shift + 8		<<		<< / Tune-
	USB		CH+ / Page+		Vol-		Vol-
	Prog		TV/Radio /		Vol+		Vol+
	Mark		Fav / Marker / PC		I<<		I<< / Preset-
	Clear		Exit / Cancel / Clear		>>		>> / Tune+
	1		1		Play/Pause		Play / Slow
	2		2		Play/Pause		Pause / Step / Freeze
	3		3		Stop		Stop / Hold
	4		4		>>I		>>I / Preset+
	5		5		Menu		Menu / Home
	6		6		Up		Up
	7		7		Setup		Setup / OPT /
	8		8		Left		Left
	9		9		Enter		OK





Original	Sustituto
 Right	 Right
 Title	 Sound / Title
 Down	 Down
 OSD	 Display / Media
 Zoom	 Zoom / Size
 Angle	 Info / Angle
 Audio	 Audio / Lang I/II
 Sub-T	 Subtitle / EQ
 Repeat	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 Slow	 Shift + Play /
 L/R	 Smart / List
 Step	 Shift + Pause / Step /
 Return	 Back / Return
 Video	 Shift + 4
 Video	 CH- / Page-
 Default	 Rec / Rec Mode

Original	Sustituto

