



Original	Sustituto
	Power
	Mute
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	TV/Radio /
	SAT
	SAT
	EPG
	Menu

Original	Sustituto
	Fav / Marker / PC
	Exit / Cancel / Clear
	Up
	CH+ / Page+
	Down
	CH- / Page-
	Left
	Vol-
	OK
	Right
	Vol+
	Red / Netflix / Search
	Audio / Lang I/II
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Display / Media
	Blue / Prime Video / Random





Original	Sustituto
Page+	Shift + CH+ /
Page-	Shift + CH- /
Recall	Back / Return
F1 /Info	Info / Angle
F1 /Info	Shift + 1
F2 / SUB	Subtitle / EQ
F2 / SUB	Shift + 2
F3 / Goto	Shift + Text /
F3 / Goto	Shift + 3
TXT	Text / Goto
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Play	Play / Slow
Stop / USB	Stop / Hold
Stop / USB	AV / Input / RDS

Original	Sustituto
Stop / USB	Shift + 8
Pause	Pause / Step / Freeze
Rec	Rec / Rec Mode

