 





































Original	Sustituto
 Power	 Power
 Power Tv	 Shift + Power
 Vol+ Tv	 Vol+
 CH+ Tv	 Shift + CH+ /
 Drive Select	 Display / Media
 AV Input Tv	 Shift + AV / Input / RDS
 Vol- Tv	 Vol-
 CH- Tv	 Shift + CH- /
 1	 1
 2	 2
 3	 3
 CH/Page+	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 CH/Page-	 CH- / Page-
 7	 7

Original	Sustituto
 8	 8
 9	 9
 Internet	 Smart / List
 Last View	 Fav / Marker / PC
 0	 0
 Radio/Tv	 TV/Radio /
 Skipe	 Shift + Smart / List
 I<< Skip	 I<< / Preset-
 Skip >>I	 >>I / Preset+
 << Slow/Search/Rewi	 << / Tune-
 Slow/search >>	 >> / Tune+
 Stop	 Stop / Hold
 Pause/Pause Live	 Pause / Step / Freeze
 Play	 Play / Slow
 i/Status	 Info / Angle
 X/Exit	 Exit / Cancel / Clear
 Guide	 Guide / EPG / -/-





Original	Sustituto	Original	Sustituto
 Pop-Up menu/Direct	 D.Menu / Top	 Prog/Check	 Shift + TV/Radio / Program
 Left	 Left	 Chapter	 Zoom / Size
 Up	 Up	 Time Slip	 Picture / Format
 OK	 OK	 Audio	 Audio / Lang I/II
 Right	 Right	 Input Select	 AV / Input / RDS
 Function Menu	 Menu / Home	 DEL	 Sleep / Timer
 Option	 Setup / OPT /	 Manual Skip -10s	 Shift + Left
 Down	 Down	 Manual Skip +60s	 Shift + Right
 Return	 Back / Return		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 Rec	 Rec / Rec Mode		
 Rec Mode	 Shift + Rec / Rec Mode		
 Text	 Text / Goto		
 STTL	 Subtitle / EQ		

