


































Original	Sustituto	Original	Sustituto
Power	 Power	Vol-	 Vol-
Info	 Info / Angle	CH+	 CH+ / Page+
Mute	 Mute / Dimmer	CH-	 CH- / Page-
1	 1	Guide	 Guide / EPG / -/--
2	 2	Fav	 Fav / Marker / PC
3	 3	Exit	 Exit / Cancel / Clear
4	 4	Up	 Up
5	 5	Left	 Left
6	 6	Enter	 OK
7	 7	Right	 Right
8	 8	Down	 Down
9	 9	Input	 AV / Input / RDS
0	 0	Menu	 Menu / Home
MTS	 Display / Media	Picture	 Picture / Format
C.C	 Smart / List	Sound	 Sound / Title
Return	 Back / Return	Sleep	 Sleep / Timer
Vol+	 Vol+		

