 













 

 





















Original	Sustituto
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Audio / Lang I/II
	 Zoom / Size
	 Shift + Menu /
	 Vol+
	 Vol-
	 Mute / Dimmer

Original	Sustituto
	 AV / Input / RDS
	 CH+ / Page+
	 CH- / Page-
	 Subtitle / EQ
	 Info / Angle
	 Back / Return
	 Exit / Cancel / Clear
	 Up
	 Down
	 Left
	 Right
	 OK
	 Shift + Red / Netflix /
	 Shift + Blue / Prime
	 Menu / Home
	 Shift + Yellow / YouTube /
	 << / Tune-





Original	Sustituto
	Stop / Hold
	>> / Tune+
	Rec / Rec Mode
	Play / Slow
	Text / Goto
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random

Original	Sustituto

