 


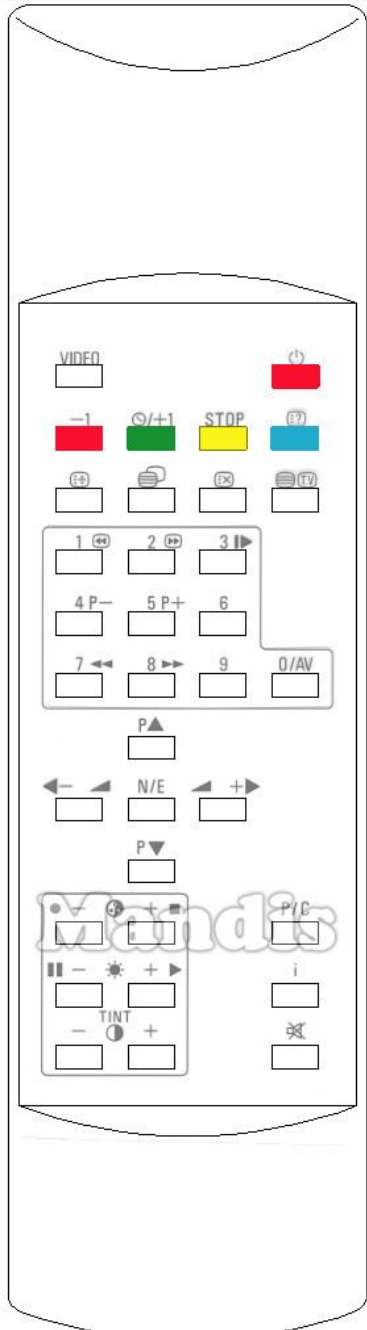

































 


Original	Sustituto	Original	Sustituto
Power	Power	9	9
Red	Red / Netflix / Search	0/AV	0
Green	Green / APP / Repeat	P+	CH+ / Page+
Yellow	Yellow / YouTube / Repeat	P-	CH- / Page-
Blue	Blue / Prime Video / Random	Vol+	Vol+
[=+]	Setup / OPT /	Vol-	Vol-
[/=]	AV / Input / RDS	N/E	OK
[=x]	Picture / Format	Right	Right
[=]	Text / Goto	Left	Left
1	1	Up	Up
2	2	Down	Down
3	3	P/C	Back / Return
4	4	i	Info / Angle
5	5	Mute	Mute / Dimmer
6	6	Color-	<< / Tune-
7	7	Color+	>> / Tune+
8	8	Brightness-	I<< / Preset-





Original	Sustituto
 Power	 Power
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 0/AV	 0
 Vol+	 Vol+
 Vol-	 Vol-
 P+	 CH+ / Page+
 P-	 CH- / Page-
 Down	 Down
 Up	 Up
 N/E	 OK
 Right	 Right
 Left	 Left
 i	 Info / Angle
 Mute	 Mute / Dimmer

Original	Sustituto
 Rec	 Rec / Rec Mode
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Tint-	 Display / Media
 Tint+	 Smart / List
 << / Tune-	 << / Tune-
 >> / Tune+	 >> / Tune+
 Zoom / Size	 Zoom / Size
 I<< / Preset-	 I<< / Preset-
 >>I / Preset+	 >>I / Preset+

