



Original	Sustituto
Standby	Power
USB/Card	Shift + 8
Open/Close	Eject / Surround
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Search	Red / Netflix / Search
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Clear	Exit / Cancel / Clear
0/10	0

Original	Sustituto
Menu	Menu / Home
Setup	Setup / OPT /
Display	Display / Media
Title	Sound / Title
Left	Left
Up	Up
Right	Right
Enter	OK
Down	Down
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
Step	Pause / Step / Freeze
Stop	Stop / Hold
Play/Pause	Play / Slow
Vol+	Vol+





Original	Sustituto
 Repeat	 Green / APP / Repeat
 A-B	 Yellow / YouTube / Repeat
 Angle	 Info / Angle
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 L/R	 AV / Input / RDS
 N/P	 Text / Goto
 PBC	 Smart / List
 Slow	 Shift + Play /
 V-Mode	 D.Menu / Top
 Return	 Back / Return
 HD/Res.	 Picture / Format
 Program	 TV/Radio /
 Zoom	 Zoom / Size

Original	Sustituto

