



Original	Sustituto
Power	Power
Open/Close	Eject / Surround
Power Tv	+  Shift + Power
1	1
2	2
3	3
PR/CH+ Tv	CH+ / Page+
4	4
5	5
6	6
PR/CH- Tv	CH- / Page-
7	7
8	8
9	9
Vol+ Tv	Vol+
Clear	Exit / Cancel / Clear
0	0

Original	Sustituto
AV/Input	AV / Input / RDS
Vol- Tv	Vol-
<<	<< / Tune-
>>	>> / Tune+
<<	<< / Preset-
>>	>>  / Preset+
Pause	Pause / Step / Freeze
Play	Play / Slow
Stop	Stop / Hold
Home	Menu / Home
Up	Up
Info/Display	Info / Angle
Right	Right
Enter	OK
Left	Left
Back	Back / Return
Down	Down





Original	Sustituto
Disc Menu	D.Menu / Top
Zoom	Zoom / Size
Marker	Fav / Marker / PC
Search	Shift + Red / Netflix /
Title/Pop-Up	TV/Radio /
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Repeat	Shift + Green / APP /
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Tv Mute	Mute / Dimmer

Original	Sustituto

