












 

 





 

 

 





Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv/AV	 AV / Input / RDS
 ←PR	 Back / Return
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right

Original	Sustituto
 OK	 OK
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 EPG	 Guide / EPG / -/--
 Mute	 Mute / Dimmer
 FAV	 Fav / Marker / PC
 Red	 Red / Netflix / Search
 Audio	 Audio / Lang I/II
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Text	 Text / Goto
 Blue	 Blue / Prime Video / Random
 Audio L/R	 Setup / OPT /

