



 

 

 



 

 

 

 

 

 

 

























 



 

 

 

 






Original	Sustituto
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Fav / Marker / PC
	 Guide / EPG / -/--
	 Info / Angle
	 Text / Goto
	 Smart / List
	 Back / Return

Original	Sustituto
	 D.Menu / Top
	 Up
	 CH+ / Page+
	 CH- / Page-
	 Down
	 Vol-
	 Left
	 Right
	 Vol+
	 OK
	 Play / Slow
	 Pause / Step / Freeze
	 I<< / Preset-
	 >>I / Preset+
	 Stop / Hold
	 Mute / Dimmer
	 << / Tune-



