



Original	Sustituto		
	Source		AV / Input / RDS
	Mute		Mute / Dimmer
	Vol-		Vol-
	Vol+		Vol+
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Album/Preset		CH- / Page-
	Album/Preset		CH+ / Page+
	Del		Display / Media
	Rec		Rec / Rec Mode

Original	Sustituto

