 

 

 

 

 

 

 

 

 



 

 



 

 

 

 





Original	Sustituto
 Power	 Power
 Open / Close	 Eject / Surround
 AUX / MP3 Link	 Shift + 7
 Radio	 Shift + 6
 Radio	 TV/Radio /
 USB	 Shift + 8
 DOCK	 Shift + 2
 Disc	 Shift + 3
 Info	 Info / Angle
 Up	 Up
 Left/Left-Left	 Left-Left / Tune-
 Left/Left-Left	 Left
 OK	 OK
 Right/Right-Right	 Right-Right / Tune+
 Right/Right-Right	 Right
 Menu/Back	 Back / Return
 Menu/Back	 Menu / Home

Original	Sustituto
 Down	 Down
 Options	 Setup / OPT /
 Left-Left-Left	 Left-Left-Left / Preset-
 Play/pause	 Play / Slow
 Right-Right-Right	 Right-Right-Right / Preset+
 Mute	 Mute / Dimmer
 Stop	 Stop / Hold
 Vol+	 Vol+
 Surround	 Shift + Eject / Surround
 Sound Modes+	 CH+ / Page+
 Vol-	 Vol-
 Sound Modes-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5





Original		Sustituto	
6	6	TUNER 6	6
7	7	AUX - HDD 7	7
8	8	USB 8	8
9	9	BLUETOOTH 9	9
SUBTITLE	Subtitle	EQ SUBTITLE	Subtitle / EQ
0	0	HDMI - BAT 0	0
AUDIO SYNC	Audio/Sync	LANG I/II AUDIO	Audio / Lang I/II
REPEAT PROGRAM	Repeat/Program	APP REPEAT	Green / APP / Repeat
REPEAT PROGRAM	Repeat/Program	SHIFT + PROGRAM TV/RADIO	Shift + TV/Radio / Program
REPEAT A-B	Repeat A-B	YouTube REPEAT A-B	Yellow / YouTube / Repeat
ZOOM	Zoom	SIZE ZOOM	Zoom / Size
SLEEP	Sleep	TIMER SLEEP	Sleep / Timer

Original		Sustituto	

