




 







 



























 






Original	Sustituto	Original	Sustituto
Update	 Pause / Step / Freeze	Yellow	 Yellow / YouTube / Repeat
Reveal	 Play / Slow	Blue	 Blue / Prime Video / Random
2.Fav P/C 2.	 Fav / Marker / PC	Audio-	 Shift + Vol-
1	 1	Audio+	 Shift + Vol+
2	 2	Tone-	 << / Tune-
3	 3	Surround	 Eject / Surround
4	 4	Level L	 Shift + Left
5	 5	Level R/Woofer	 Shift + Right
6	 6	Display	 Display / Media
7	 7	Mute	 Mute / Dimmer
8	 8	Txt Stop	 Stop / Hold
9	 9	Sleep Timer	 Sleep / Timer
Guide -/-- 1.	 Guide / EPG / -/--	Return TV	 TV/Radio /
0/10	 0	Menu video	 D.Menu / Top
Chan.Down	 CH- / Page-	Text	 Text / Goto
Red	 Red / Netflix / Search	TV/AV	 AV / Input / RDS
Green	 Green / APP / Repeat	Menu	 Menu / Home



Original	Sustituto	Original	Sustituto
Menu Up	 Up		
On/Off	 Power		
Menu Left	 Left		
OK Enter	 OK		
Menu Right	 Right		
Menu Off	 Exit / Cancel / Clear		
Menu Down	 Down		
Back	 Back / Return		
Volume+	 Vol+		
Chan.Up	 CH+ / Page+		
Volume-	 Vol-		
Menu audio /	 Audio / Lang I/II		

