

 












 





Original	Sustituto
	Power
	Top Menu
	View/Bonus
	Repeat
	HDMI
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Menu / Home
	Shift + Menu /
	Setup / OPT /
	Back / Return
	Info / Angle
	Up
	Down
	Left

Original	Sustituto
	Right
	OK
	Left
	Play / Slow
	Pause / Step / Freeze
	> / Preset+
	<< / Tune-
	Stop / Hold
	>> / Tune+
	Vol+
	Vol-
	Mute / Dimmer
	Eject / Surround
	CH+ / Page+
	CH- / Page-
	1
	2





Original	Sustituto	Original	Sustituto
3 DEF	3	CD - STB	3
4 GHI	4	VIDEO	4
5 JKL	5	TAPE	5
6 MNO	6	TUNER	6
7 PQRS	7	AUX - HDD	7
8 TUV	8	USB	8
9 WXYZ	9	BLUETOOTH	9
0 _@	0	HDMI - BAT	0
SUBTITLE	Subtitle	EQ	Subtitle / EQ
AUDIO	Audio	LANG I/II	Audio / Lang I/II

