
 


 

 



 
 

 

 

 

 

 






Original	Sustituto
 Open/Close	 Eject / Surround
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 10+	 Shift + Guide / EPG / -/--
 Display	 Display / Media
 Mute	 Mute / Dimmer
 Title/TTX	 Text / Goto
 Menu	 Menu / Home

Original	Sustituto
 Prog/EPG	 Guide / EPG / -/--
 PBC	 Shift + 0
 Goto	 Shift + Text /
 Vol-	 Vol-
 Vol+	 Vol+
 Pause	 Pause / Step / Freeze
 Play	 Play / Slow
 Stop	 Stop / Hold
 Setup	 Setup / OPT /
 Return	 Back / Return
 Source	 AV / Input / RDS
 Tv/Radio	 TV/Radio /
 Up	 Up
 Down	 Down
 FAV-	 CH- / Page-
 Left	 Left
 Right	 Right





Original	Sustituto
	 CH+ / Page+
	 OK
	 << / Tune-
	 >> / Tune+
	 I<< / Preset-
	 >>I / Preset+
	 Picture / Format
	 Subtitle / EQ
	 Zoom / Size
	 Shift + Display / Media
	 Sound / Title
	 Audio / Lang I/II
	 Red / Netflix / Search
	 Sleep / Timer
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Info / Angle

Original	Sustituto
 Slow	 Shift + Play /

