

































 






Original	Sustituto
 Power TV	 Power
 1 CD	 Shift + 1
 1	 1
 2 CD	 Shift + 2
 2	 2
 3	 3
 3 CD	 Shift + 3
 4	 4
 4 CD	 Shift + 4
 5	 5
 5 CD	 Shift + 5
 6	 6
 6 CD	 Shift + 6
 7 CD	 Shift + 7
 7	 7
 8 CD	 Shift + 8
 8	 8



Original	Sustituto
 9	 9
 9 CD	 Shift + 9
 0 CD	 Shift + 0
 0	 0
 10	 Shift + Fav / Marker / PC
 10 CD	 Guide / EPG / -/-
 +10	 Shift + Guide / EPG / -/-
 +10 CD	 Fav / Marker / PC
 Tv/Video	 TV/Radio /
 CD	 Smart / List
 Tv Vol+	 Vol+
 Tv Vol-	 Vol-
 Muting	 Mute / Dimmer
 Pause CD	 Pause / Step / Freeze
 <</ << CD	 << / Tune-
 Play CD	 Play / Slow
 Stop CD	 Stop / Hold





Original

Sustituto





 

















 











	>>/>>I CD		>> / Tune+

Original

Sustituto





Original	Sustituto
 Power DVD	 Power
 Test	 1
 Subwoofer-	 Shift + Vol-
 Subwoofer+	 Shift + Vol+
 Effect	 4
 Center-	 5
 Menu	 Menu / Home
 Center+	 6
 Bass/Boost	 7
 Enter	 OK
 Rear L-	 8
 Rear L+	 9
 Rear R-	 0
 Rear R+	 Fav / Marker / PC
 Sleep	 Sleep / Timer
 Surround	 Eject / Surround
 DSP Mode	 Setup / OPT /

Original	Sustituto
 Tv/Video	 TV/Radio /
 Vol+	 Vol+
 Vol-	 Vol-
 Muting	 Mute / Dimmer
 Pause	 Pause / Step / Freeze
 TV/VCR CH+	 CH+ / Page+
 TV/VCR CH-	 CH- / Page-
 Left	 Left
 <</><<	 << / Tune-
 Play	 Play / Slow
 Up	 Up
 Stop	 Stop / Hold
 Down	 Down
 Right	 Right
 >>/>>	 >> / Tune+





Original	Sustituto
Power VCR	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
Input A/D	AV / Input / RDS
TV/Video	TV/Radio /
Pause	Pause / Step / Freeze
TV/VCR CH+	CH+ / Page+
TV/VCR CH-	CH- / Page-
<<<	<<< / Tune-

Original	Sustituto
Play	Play / Slow
Stop	Stop / Hold
>>>	>>> / Tune+





Original		Sustituto	
	Power Audio		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10		Guide / EPG / -/--
	+10		Fav / Marker / PC
	AM		Red / Netflix / Search
	Vol+		Vol+
	Vol-		Vol-
	Muting		Mute / Dimmer
	TV/VCR CH+		CH+ / Page+

Original		Sustituto	
	TV/VCR CH-		CH- / Page-

