



Original	Sustituto
 Power	 Power
 e/Energy Saving	 Shift + OK
 AV Mode	 Text / Goto
 Input	 AV / Input / RDS
 TV	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 List	 Smart / List
 Q.View	 Setup / OPT /

Original	Sustituto
 FAV/Mark	 Fav / Marker / PC
 Ratio	 Picture / Format
 Mute/Delete	 Mute / Dimmer
 Vol+	 Vol+
 Vol-	 Vol-
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 Menu	 Menu / Home
 Netcast	 Display / Media
 Q.Menu	 D.Menu / Top
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Enter	 OK
 Back	 Back / Return
 Simplink	 Zoom / Size





Original		Sustituto		Original		Sustituto	
	Exit		Exit / Cancel / Clear				
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				
	Stop		Stop / Hold				
	Play		Play / Slow				
	Pause		Pause / Step / Freeze				
	<<		<< / Tune-				
	>>		>> / Tune+				

