



 

 





 

 



 





 













Original	Sustituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 EPG	 Guide / EPG / -/--
 Rec	 Rec / Rec Mode
 Info	 Info / Angle
 Vol+	 Vol+
 Vol-	 Vol-

Original	Sustituto
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 ≡	 D.Menu / Top
	 AV / Input / RDS
	 Display / Media
	 Up
	 Down
	 Right
	 Left
	 OK
	 Back / Return
	 Exit / Cancel / Clear
	 Red / Netflix / Search
	 Menu / Home
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random





Original	Sustituto
	TUNE- << / Tune-
	TUNE+ >> / Tune+
	SLOW Play / Slow
	STEP-FREEZE Pause / Step / Freeze
	HOLD Stop / Hold
	EQ Subtitle / EQ
	LANG I/II Audio / Lang I/II
	GOTO Text / Goto
	SHIFT + SEARCH Shift + Red / Netflix /
	SHIFT + REPEAT A-B Shift + Yellow / YouTube /
	SHIFT + RANDOM Shift + Blue / Prime
	SHIFT + REPEAT Shift + Green / APP /

Original	Sustituto

