




Original	Sustituto
 Power	 Power
 CBL/SAT	 AV / Input / RDS
 DVD	 Shift + 2
 Tv Audio	 Audio / Lang I/II
 Blu-ray	 Shift + Blue / Prime
 AUX	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Shift + Green / APP /
 8K	 Shift + Yellow / YouTube /
 Phono	 Guide / EPG / -/--
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Internet Radio	 Shift + 0
 Internet Radio	 TV/Radio /
 Quick Select 1	 Sound / Title

Original	Sustituto
 Quick Select 2	 Picture / Format
 Quick Select 3	 D.Menu / Top
 Quick Select 4	 Zoom / Size
 CH/Page Up	 CH+ / Page+
 CH/Page Down	 CH- / Page-
 Eco	 Smart / List
 Mute	 Mute / Dimmer
 Volume+	 Vol+
 Volume-	 Vol-
 Info	 Info / Angle
 Option	 Shift + Setup / Tools
 Back	 Back / Return
 Setup	 Setup / OPT /
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right





Original		Sustituto		Original		Sustituto	
	I<</Tune-		I<< / Preset-		7		7
	Play		Play / Slow		8		8
	>>I/Tune+		>>I / Preset+		9		9
	<<		<< / Tune-		0		0
	Pause		Pause / Step / Freeze		Enter		OK
	Stop		Stop / Hold		Sleep		Sleep / Timer
	>>		>> / Tune+				
	Green/Movie		Green / APP / Repeat				
	Red/Music		Red / Netflix / Search				
	Blue/Game		Blue / Prime Video / Random				
	Yellow/Pure		Yellow / YouTube / Repeat				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				





Original	Sustituto
Power	Power
CBL/SAT	AV / Input / RDS
DVD	Shift + 2
Tv Audio	Audio / Lang I/II
Blu-ray	Shift + Blue / Prime
AUX	Shift + 7
Tuner	Shift + 6
Bluetooth	Shift + 9
Game	Blue / Prime Video / Random
8K	Yellow / YouTube / Repeat
Phono	Guide / EPG / -/--
USB	Shift + 8
Media Player	Display / Media
CD	Shift + 3
Internet Radio	Shift + 0
Quick Select 1	TV/Radio /
	Sound / Title

Original	Sustituto
Quick Select 2	Picture / Format
Quick Select 3	D.Menu / Top
Quick Select 4	Zoom / Size
CH/Page Up	CH+ / Page+
CH/Page Down	CH- / Page-
Mute	Mute / Dimmer
Volume+	Vol+
Volume-	Vol-
Up	Up
Down	Down
Left	Left
Right	Right
Back	Back / Return
I<</Tune-	I<< / Preset-
Play	Play / Slow
>>I/Tune+	>>I / Preset+
<<	<< / Tune-



 





 

 

 
 
 
 
 
 

 

 
 



 




 





Original	Sustituto
	Pause / Step / Freeze
	Stop / Hold
	>> / Tune+
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	OK
	Sleep / Timer

Original	Sustituto







 
 

 


 



 


Original	Sustituto
 Power	 Power
 CBL/SAT	 AV / Input / RDS
 DVD	 Shift + 2
 Tv Audio	 Audio / Lang I/II
 Blu-ray	 Blue / Prime Video / Random
 AUX	 Shift + 7
 Tuner	 Shift + 6
 Bluetooth	 Shift + 9
 Game	 Green / APP / Repeat
 8K	 Yellow / YouTube / Repeat
 Phono	 Guide / EPG / -/--
 USB	 Shift + 8
 Media Player	 Display / Media
 CD	 Shift + 3
 Internet Radio	 Shift + 0
 Internet Radio	 TV/Radio /
 Quick Select 1	 Sound / Title

Original	Sustituto
 Quick Select 2	 Picture / Format
 Quick Select 3	 D.Menu / Top
 Quick Select 4	 Zoom / Size
 CH/Page Up	 CH+ / Page+
 CH/Page Down	 CH- / Page-
 Mute	 Mute / Dimmer
 Volume+	 Vol+
 Volume-	 Vol-
 Up	 Up
 Down	 Down
 Left	 Left
 Right	 Right
 Back	 Back / Return
 I<</Tune-	 I<< / Preset-
 Play	 Play / Slow
 >>I/Tune+	 >>I / Preset+
 <<	 << / Tune-





Original	Sustituto
	Pause / Step / Freeze
	Stop / Hold
	>> / Tune+
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	OK
	Sleep / Timer

Original	Sustituto

