










 





 

 

 



 

 
 



 






Original	Sustituto
 Power	 Power
 SET	 Fav / Marker / PC
 Wide	 Zoom / Size
 Hi-Speed REW	 Shift + << /
 Counter Remain	 Red / Netflix / Search
 TV/Video	 TV/Radio /
 Eject	 Eject / Surround
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Sustituto
 -/--	 Guide / EPG / -/--
 Prog+	 CH+ / Page+
 Prog-	 CH- / Page-
 Vol+	 Vol+
 Vol-	 Vol-
 Play	 Play / Slow
 Stop	 Stop / Hold
 Pause	 Pause / Step / Freeze
 FF	 >> / Tune+
 Index Search >>I	 >>I / Preset+
 I<< Index Search	 I<< / Preset-
 REW	 << / Tune-
 Skip	 Exit / Cancel / Clear
 Wheel >	 Shift + >>I / Preset+
 Up	 Up
 < Wheel	 Shift + I<< / Preset-
 Down	 Down





Original	Sustituto
Power	Power
Wide	Zoom / Size
Display	Display / Media
TV/Video	TV/Radio /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Guide / EPG / -/--
Vol+	Vol+
Vol-	Vol-

Original	Sustituto
Prog+	CH+ / Page+
Prog-	CH- / Page-
Audio Monitor	Audio / Lang I/II
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
[≡]	Text / Goto
□	Smart / List

