




 















 



 







Original	Sustituto	Original	Sustituto
	Power		Power
	Source (Games)		AV / Input / RDS
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	TV		TV/Radio /
	0		0
	Recall		Fav / Marker / PC
	Vol+		Vol+
	Mute		Mute / Dimmer
	PR+		CH+ / Page+

Original	Sustituto	Original	Sustituto
	Vol-		Vol-
	World/Internet		Smart / List
	PR-		CH- / Page-
	Menu		Menu / Home
	Q.Menu		D.Menu / Top
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Back		Back / Return
	Exit		Exit / Cancel / Clear
	i		Info / Angle
	Movie-Music-Phot		Display / Media
	Guide		Guide / EPG / -/--
	*/o		Picture / Format
	*/o..		Setup / OPT /





Original	Sustituto
 [=]/Text	 Text / Goto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Lang	 Audio / Lang I/II
 [=]..	 Subtitle / EQ
 [-o-]	 Zoom / Size
 <<	 << / Tune-
 Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Play	 Play / Slow
 Stop	 Stop / Hold

Original	Sustituto

