 











 

 























Original	Sustituto
 Standby	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 FAV	 Fav / Marker / PC
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Original	Sustituto
 Tv/Radio	 TV/Radio /
 Info	 Info / Angle
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 EPG	 Guide / EPG / -/--
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Media	 Display / Media
 CH-	 CH- / Page-
 F1	 Rec / Rec Mode





Original	Sustituto
F2	TOP MENU D.MENU D.Menu / Top
AUDIO I/II	LANG I/II AUDIO Audio / Lang I/II
ASPECT SIZE	SHIFT + SIZE ZOOM Shift + Zoom /
TEXT	GOTO TEXT Text / Goto
REVEAL	OPT-TOOLS SETUP Setup / OPT /
HOLD	SHIFT + HOLD Stop /
SUBPAGE	SURROUND Eject / Surround
Play	SLOW Play / Slow
Pause	STEP-FREEZE Pause / Step / Freeze
Stop	HOLD Stop / Hold
ZOOM INDEX	SIZE ZOOM Zoom / Size
SUBTITLE	EQ SUBTITLE Subtitle / EQ
<<	TUNE- << / Tune-
>>	TUNE+ >> / Tune+
I<<	PRESET- I<< / Preset-
>>I/Mix	PRESET+ >>I / Preset+
Red	NETFLIX SEARCH Red / Netflix / Search

Original	Sustituto
Green	APP REPEAT Green / APP / Repeat
Yellow	YouTube REPEAT A-B Yellow / YouTube / Repeat
Blue	Prime Video RANDOM Blue / Prime Video / Random

