



Original	Sustituto	Original	Sustituto
 Power	 Power	 Progressive	 TV/Radio /
 Dimmer	 Mute / Dimmer	 DVD Menu	 D.Menu / Top
 Play	 Play / Slow	 Rec Menu	 Setup / OPT /
 Pause	 Pause / Step / Freeze	 CHP Divide	 Text / Goto
 Stop	 Stop / Hold	 Input Select	 AV / Input / RDS
 Rec	 Rec / Rec Mode	 Content Menu	 Menu / Home
 << Picture	 << / Tune-	 Up	 Up
 Picture Search	 >> / Tune+	 DVD Angle	 Info / Angle
 I<< Skip	 I<< / Preset-	 Left	 Left
 Skip >>I	 >>I / Preset+	 Enter	 OK
 FL Select	 Sound / Title	 Right	 Right
 DVD Audio	 Audio / Lang I/II	 Clear	 Exit / Cancel / Clear
 DVD Subtitle	 Subtitle / EQ	 Down	 Down
 Open / Close	 Eject / Surround	 DVD Return	 Back / Return
 P in P	 Picture / Format	 Instant Skip	 Vol+
 Zoom	 Zoom / Size	 Easy Navi	 Smart / List
 Timesleep	 Sleep / Timer	 Channel+	 CH+ / Page+





Original	Sustituto
Instant Replay	Vol-
Library	Display / Media
Channel-	CH- / Page-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10	Guide / EPG / -/--
0	0
Remain	Fav / Marker / PC
Red	Red / Netflix / Search
Green	Green / APP / Repeat

Original	Sustituto
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Rec Mode	Shift + Rec / Rec Mode
<I Slow	Shift + << /
Slow I>	Shift + >> /
II< Frame/Adjust	Shift + I<< / Preset-
Frame/Adjust >II	Shift + >>I / Preset+
Time Bar	Shift + Sleep / Timer
Top Menu	Shift + D.Menu / Top Menu
Setup	Shift + Setup / OPT / Tools
Edit Menu	Shift + Menu /
Delete	Shift + Exit / Cancel / Clear
Display	Shift + Display / Media
DVD	Shift + 2
HDD	Shift + 7
T.Search	Shift + Red / Netflix /

