

































 







 

 



 

 

 



 

 



 

 







Original	Sustituto
 Power	 Power
 Timer	 Sleep / Timer
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Guide / EPG / -/--
 0	 0
 Recall	 Back / Return
 PM	 Smart / List
 Info	 Info / Angle

Original	Sustituto
 Input	 AV / Input / RDS
 Audio	 Audio / Lang I/II
 Up / CH+	 CH+ / Page+
 Up / CH+	 Up
 Left / Vol-	 Vol-
 Left / Vol-	 Left
 Menu	 Menu / Home
 Right / Vol+ / Enter	 Right
 Right / Vol+ / Enter	 Vol+
 Right / Vol+ / Enter	 OK
 [+]	 >> / Tune+
 Down / CH-	 CH- / Page-
 Down / CH-	 Down
 =>1	 >> / Preset+
 [-]	 << / Tune-
 1<=	 << / Preset-
 Red / EPG	 Red / Netflix / Search





Original	Sustituto
Red / EPG	Shift + Guide / EPG / -/--
Green / Fav	Green / APP / Repeat
Green / Fav	Fav / Marker / PC
Yellow / Digest	Yellow / YouTube / Repeat
Blue / Pause	Blue / Prime Video / Random
Blue / Pause	Pause / Step / Freeze
Info / Reveal	Shift + Info / Angle
Up / Size	Shift + Up
Up / Size	Zoom / Size
Subtitle / Stop	Stop / Hold
Subtitle / Stop	Subtitle / EQ
4:3/16:9	Picture / Format
Left / Index	Shift + Left
Menu Red	Shift + Menu /
Right / Sub.Pg	Shift + Right
TTX On/Off/Mix	Text / Goto
Radio	TV/Radio /

Original	Sustituto
Down Red	Shift + Down
Enter Red	Shift + OK
Exit	Exit / Cancel / Clear

