



































| Original    | Sustituto   | Original   | Sustituto   |
|-------------|---|------------|---|
| On/Off      |  Power             | Menu Right |  Right           |
| Mute        |  Mute / Dimmer     | Menu Down  |  Down            |
| Txt Stop    |  Stop / Hold       | Back       |  Back / Return   |
| Menu audio  |  Audio / Lang I/II | Volume+    |  Vol+            |
| Subt.List   |  Subtitle / EQ     | Disp       |  Smart / List    |
| Txt Expand  |  Zoom / Size       | Chan.Up    |  CH+ / Page+     |
| Sleep Timer |  Sleep / Timer     | Volume-    |  Vol-            |
| Return TV   |  TV/Radio /        | Display    |  Display / Media |
| Menu video  |  D.Menu / Top      | Chan.Down  |  CH- / Page-     |
| Reveal      |  Setup / OPT /     | 1          |  1               |
| Text        |  Text / Goto       | 2          |  2               |
| TV/AV       |  AV / Input / RDS | 3          |  3              |
| Menu        |  Menu / Home     | 4          |  4             |
| Menu Up     |  Up              | 5          |  5             |
| Info        |  Info / Angle    | 6          |  6             |
| Menu Left   |  Left            | 7          |  7             |
| OK Enter    |  OK              | 8          |  8             |



