



| Original | Sustituto |
|---|--|
|  |  Mute / Dimmer |
|  |  Power |
|  |  Display / Media |
|  |  AV / Input / RDS |
|  |  Shift + Pause / Step / |
|  |  Exit / Cancel / Clear |
|  |  Guide / EPG / -/-- |
|  |  Text / Goto |
|  |  Subtitle / EQ |
|  |  Picture / Format |
|  |  Setup / OPT / |
|  |  Up |
|  |  Audio / Lang I/II |
|  |  Left |
|  |  OK |
|  |  Right |
|  |  Menu / Home |

| Original | Sustituto |
|---|---|
|  |  Down |
|  |  Info / Angle |
|  |  CH- / Page- |
|  |  CH+ / Page+ |
|  |  Vol- |
|  |  Vol+ |
|  |  Red / Netflix / Search |
|  |  Shift + CH+ / |
|  |  Smart / List |
|  |  Green / APP / Repeat |
|  |  Shift + CH- / |
|  |  Sound / Title |
|  |  Yellow / YouTube / Repeat |
|  |  Blue / Prime Video / Random |
|  |  1 |
|  |  2 |
|  |  3 |



