




























| Original | | Sustituto | | Original | | Sustituto | |
|---|-------------------|---|-----------------------|---|-------------|---|---------------------------|
|  | Power |  | Power |  | Bass- |  | CH- / Page- |
|  | Optical |  | 8 |  | Down / Vol- |  | Vol- |
|  | Mute |  | Mute / Dimmer |  | Down / Vol- |  | Down |
|  | AUX |  | 7 |  | Treb- |  | << / Tune- |
|  | BT |  | 9 |  | Flat |  | Red / Netflix / Search |
|  | HDMI ARC |  | 0 |  | Movie |  | Green / APP / Repeat |
|  | Bass+ |  | CH+ / Page+ |  | Music |  | Yellow / YouTube / Repeat |
|  | Up / Vol+ |  | Up | | | | |
|  | Up / Vol+ |  | Vol+ | | | | |
|  | Treb+ |  | >> / Tune+ | | | | |
|  | Left / I<< |  | I<< / Preset- | | | | |
|  | Left / I<< |  | Left | | | | |
|  | Play/Pause / Pair |  | Smart / List | | | | |
|  | Play/Pause / Pair |  | Pause / Step / Freeze | | | | |
|  | Play/Pause / Pair |  | Play / Slow | | | | |
|  | Right / >>I |  | >>I / Preset+ | | | | |
|  | Right / >>I |  | Right | | | | |

