




















































 
 
 
 
 
 










Original	Sustituto	Original	Sustituto
On/Off	 Power	Menu video	 D.Menu / Top
Mute	 Mute / Dimmer	Store	 Setup / OPT /
On/Tim	 Play / Slow	Text	 Text / Goto
Off/Tim	 Pause / Step / Freeze	TV/AV	 AV / Input / RDS
Txt Stop	 Stop / Hold	Menu	 Menu / Home
Tone-	 << / Tune-	Menu Up	 Up
Tone+	 >> / Tune+	Info	 Info / Angle
Contrast-	 I<< / Preset-	Menu Left	 Left
Contrast+	 >>I / Preset+	OK Enter	 OK
Color- S.Std	 Sound / Title	Menu Right	 Right
Menu audio	 Audio / Lang I/II	Menu Off	 Exit / Cancel / Clear
Subt.List	 Subtitle / EQ	Menu Down	 Down
Surround	 Eject / Surround	Back	 Back / Return
Color+ P.Std	 Picture / Format	Volume+	 Vol+
Txt Expand	 Zoom / Size	Browse	 Smart / List
Sleep Timer	 Sleep / Timer	Chan.Up	 CH+ / Page+
Return TV	 TV/Radio /	Volume-	 Vol-



Original	Sustituto	
Disp	 Display / Media	
Chan.Down	 CH- / Page-	
1	 1	1
2	 2	2
3	 3	3
4	 4	4
5	 5	5
6	 6	6
7	 7	7
8	 8	8
9	 9	9
Guide -/-- 1.	 Guide / EPG / -/--	
0/10	 0	0
2.Fav P/C 2.	 Fav / Marker / PC	
Red	 Red / Netflix / Search	
Green	 Green / APP / Repeat	
Yellow	 Yellow / YouTube / Repeat	

Original	Sustituto	
Blue	 Blue / Prime Video / Random	
Update	 Shift + Play /	
Reveal	 Shift + Pause / Step /	
Nicam/Mono	 Shift + Audio / Lang I/II	
4.# 16:9	 Shift + Picture / Format	
Store Text	 Shift + Setup / OPT / Tools	
Rotate Text	 Shift + Text /	
Level L	 Shift + Left	
Level R/Woofer	 Shift + Right	
Audio+	 Shift + Vol+	
Game Coo	 Shift + Smart / List	
Bright+ Mode	 Shift + CH+ /	
Display	 Shift + Display / Media	
Bright- Sys	 Shift + CH- /	
3.*	 Shift + 3	
Search	 Shift + Red / Netflix /	

