











 
































 




 

 


 










Original	Sustituto
 Eject	 Eject / Surround
 Power	 Power
 Copy	 TV/Radio /
 Info	 Info / Angle
 Power Mode	 Sleep / Timer
 Net Test	 Smart / List
 Net Cast	 Display / Media
 Slow	 Shift + Play /
 <<	 << / Tune-
 Play/Pause	 Play / Slow
 Play/Pause	 Pause / Step / Freeze
 >>	 >> / Tune+
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 Setup	 Setup / OPT /
 Home	 Shift + Menu / Home

Home

Original	Sustituto
 Repeat	 Shift + Green / APP /
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 Page+	 CH+ / Page+
 Vol-	 Vol-
 Page-	 CH- / Page-
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Return	 Back / Return
 Menu	 Menu / Home
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random



